

DIGITAL CLOCKS

# LEDI® & LEDICA®

 Tri-colour



*Accuracy  
Legibility  
Quality  
Design*




GORGY  TIMING

LA MARQUE DU TEMPS

[www.gorgy-timing.com](http://www.gorgy-timing.com)

# New generation LEDI® LEDICA®

## A range of LED clocks definitely professional.

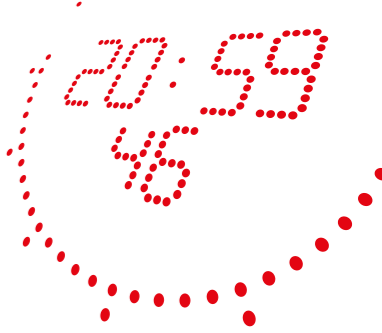

- **Matt anodized aluminium case**  
For wall mounting or flush mounting in a wall. Its housing provides IP30 protection in single and double sided version, IP54 in waterproof version. IK9 shock resistant.



LEDI® 5.60

- **Multilingue**  
13 display languages: German, English, Danish, Spanish, Finnish, Flemish, French, Dutch, Italian, Norwegian, Portuguese, Russian, Swedish.
- **Power supply**  
230V.  
Low voltage.  
POE (Power Over Ethernet).  
Multi POE.

- **Anti-reflective front face**  
With special layer against scratch eliminates 80% of reflection due to ambient luminosity.
- **TCXO Temperature Compensated Cristal Oscillator**  
Integrated electronics continuously adjust the oscillator according to the temperature to ensure an accuracy of a professional clock...Operating temperature from -20° et 60°C.
- **Time Base principles**  
Standalone or radiosynchronised on DCF, GPS...  
**Synchronised on an external source\***
- **Specific light guides**  
The patented technology of the light guide provides a perfect regularity of the brightness and viewing angle at 160 °.
- **Tri-colour electroluminescent diodes**  
Match the colour to your mood in red, green, yellow. Blue, cyan or white in option.  
In the waterproof product range: tri-colour ultra high luminescence.

Digital clock LEDI®, international timepiece, has been created with perfection, its design and its innovations are immediately identifiable as GORGY TIMING original model.

### ► The permanent improvements that make us different:

- Display of calendar information and additional features such as: timer, time codes, a luminous wave for seconds, temperature...
- The same LEDI® or LEDICA® may be wall mounted or flush mounted, with or without bracket, with single or double sided display.
- You can also change the colour thanks to the tri-colour electroluminescent diodes (LED).
- 6 models of waterproof clocks LEDI® OUTDOOR.



LEDI® 1.60.S desk pivoting case



LEDI® 7.S Hospital with touch sensor timer



LEDICA® Alpha 7.60

### \*POSSIBLE SOURCES OF SYNCHRONISATION

The professional clocks LEDI® can display the same time information, synchronized by a master clock or a time server.

- DCF
- AFNOR NFS 87500/IRIG-B
- NTP Ethernet 10/100 base T
- DHW 869.525 Mhz
- Wi-fi (IEEE 802.11 B/G standards)
- ASCII: RS 485
- Impulsed: Parallel inverse 24V minute receptor
- Power Over Ethernet
- GPS
- SMPTE



### Eco-friendly clock














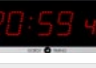


Recyclable aluminium, low power consumption, ROHS compliant, recyclable packaging, documentation compliant with PEFC, estimated life span of more than 20 years.










### Choose a GORGY TIMING LEDI® clock to equip:






- Radio and television studios
- Bank, offices and administrative centers
- Hotels, companies, shops
- Airports, railway stations, energy plants
- Schools, universities, swimming pools
- Hospitals, sports halls and gymnasiums...

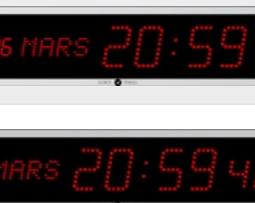LEDI® 15 outdoor



LEDI® Digital clock (REVERSO: double face)		Dimensions in mm (L x H x D)	Digit height (hour/minute)	Distance of legibility	Seconds display
	LEDI® 5 LEDI® REVERSO 5	235 x 145 x 62 235 x 145 x 99	50 mm	25 m	No
	LEDI® 5-S LEDI® REVERSO 5-S	315 x 145 x 62 315 x 145 x 99	50 mm	25 m	Yes
	LEDI® 5-60 LEDI® REVERSO 5-60	270 x 270 x 62 270 x 270 x 99	50 mm	25 m	Wave for seconds
	LEDI® 7 LEDI® REVERSO 7	350 x 165 x 62 350 x 165 x 99	70 mm	35 m	No
	LEDI® 7 outdoor LEDI® 7 REVERSO outdoor	356 x 171 x 75 356 x 171 x 165	70 mm	35 m	No
	LEDI® 7-S LEDI® REVERSO 7-S	430 x 165 x 62 430 x 165 x 99	70 mm (sec 50 mm)	35 m	Yes
	LEDI® 7-S outdoor LEDI® 7-S REVERSO outdoor	436 x 171 x 75 436 x 171 x 165	70 mm (sec 50 mm)	35 m	Yes
	LEDI® 5-S hospital	375 x 164 x 66	70 mm	25 m	Yes
	LEDI® 7-S hospital	490 x 184 x 66	70 mm (sec 50 mm)	35 m	Yes
	LEDI® 7-60 LEDI® REVERSO 7-60	390 x 390 x 62 390 x 390 x 99	70 mm	35 m	Wave for seconds
	LEDI® 7-60-S LEDI® REVERSO 7-60-S	390 x 390 x 62 390 x 390 x 99	70 mm (sec 50 mm)	35 m	Yes + Wave for seconds
	LEDI® 10 LEDI® REVERSO 10	500 x 210 x 62 500 x 210 x 99	110 mm	60 m	No
	LEDI® 10-S LEDI® REVERSO 10-S	640 x 210 x 62 640 x 210 x 99	110 mm (sec 70 mm)	60 m	Yes
	LEDI® 12 outdoor LEDI® 12 REVERSO outdoor	506 x 216 x 75 506 x 216 x 165	110 mm	60 m	No
	LEDI® 12-S outdoor LEDI® 12-S REVERSO outdoor	721 x 216 x 75 721 x 216 x 165	110 mm	60 m	Yes
	LEDI® 15 outdoor LEDI® 15 REVERSO outdoor	760 x 315 x 62 760 x 315 x 165	160 mm	80 m	No
	LEDI® 15-S outdoor LEDI® 15-S REVERSO outdoor	950 x 315 x 62 950 x 315 x 165	160 mm (sec 110 mm)	80 m	Yes

LEDICA® Digital clock calendar (REVERSO: double face)		Dimensions in mm (L x H x D)	Digit height (hour/minute)	Distance of legibility	Seconds display
	LEDICA® 7-M LEDICA® REVERSO 7-M	625 x 165 x 62 625 x 165 x 99	70 mm (date 50 mm)	35 m	No
	LEDICA® 7-M-S LEDICA® REVERSO 7-M-S	715 x 165 x 62 715 x 165 x 99	70 mm (date/sec 50 mm)	35 m	Yes
	LEDICA® ALPHA 7-M LEDICA® ALPHA REVERSO 7-M	650 x 220 x 62 650 x 220 x 99	70 mm (date 50 mm)	35 m	No
	LEDICA® ALPHA 7-M-S LEDICA® ALPHA REVERSO 7-M-S	760 x 220 x 62 760 x 220 x 99	70 mm (date/sec 50 mm)	35 m	Yes
	LEDICA® ALPHA Square 7-M LEDICA® ALPHA REVERSO Square 7-M	390 x 390 x 62 390 x 390 x 99	70 mm (date 50 mm)	35 m	No
	LEDICA® ALPHA 7-60M LEDICA® ALPHA 7-60M-S	390 x 550 x 62 390 x 550 x 99	70 mm (date 50 mm)	35 m	Wave for seconds
	LEDICA® ALPHA REVERSO 7-60M LEDICA® ALPHA REVERSO 7-60M-S	390 x 550 x 62 390 x 550 x 99	70 mm (date/sec 50 mm)	35 m	Yes + Wave for seconds
	LEDICA® 10-M LEDICA® REVERSO 10-M	770 x 210 x 62 770 x 210 x 62	110 mm (date 70 mm)	60 m	No
	LEDICA® 10-M-S LEDICA® REVERSO 10-M-S	930 x 210 x 62 930 x 210 x 99	110 mm (date/sec 70 mm)	60 m	Yes

LEDI® Digital clock		Dimensions in mm (L x H x D)	Digit height (hour/minute)	Distance of legibility	Seconds display
	LEDI® 1-S	180 x 44 x 141	14 mm	5 m	Yes
	LEDI® 2-S	190 x 130 x 141	20 mm	7 m	Yes
	LEDI® 1-60 LEDI® 1-60-S	115 x 115 x 40 115 x 115 x 40	18 mm (sec 8 mm)	5 m	Wave for seconds Yes + Wave for seconds
	LEDI® 1-60 DESK LEDI® 1-60S DESK	130 x 145 x 190 130 x 145 x 190	18 mm (sec 8 mm)	5 m	Wave for seconds Yes + Wave for seconds
	LEDI® POOL	1150 x 260 x 62	110 mm (Temperature: 70 mm)	60 m	No


# Digital clocks LEDI® LEDICA®

## SPECIFIC VERSIONS

LED digital clocks LEDI® are available in several specific versions\*:

- Personalized design
- Customized installation
- Monumental clocks
- A wide range of housing colours

LEDI® 7 "Sénat"

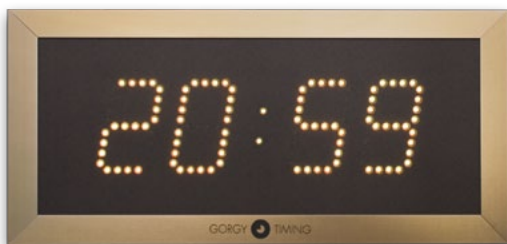

LEDI® 7.60  
Round case



### OPTIONAL SERVICES\*

- Presales support.
- Training and Commissioning Assistance.
- Technical support.
- Pre-configuration and complete configuration of the product in the factory, on-site or remotely.
- Maintenance contract.
- Installation.



### CERTIFICATIONS



All GORGYTIMING product ranges comply with the following standards:

- **CE, EN 60950** (safety), **EN 55022** (EMC emission), **EN 55024** (EMC immunity), **ROHS**.
- **ISO 9001** and **ISO 14001** certified company.

\*Information available from the GORGYTIMING sales department.

 **MADE IN FRANCE**

GORGY  TIMING

L A M A R Q U E D U T E M P S

Quartier Beauregard - 38350 La Mure d'Isère (Grenoble France).  
Phone: +33 476 30 48 20 Fax: +33 476 30 85 33  
e.mail : gorgy@gorgy-timing.fr [www.gorgy-timing.com](http://www.gorgy-timing.com)

GORGYTIMING SAS au capital de 1 109 067 €